


# Panel Doors

The distinctive look of every panel door we manufacture is in the profile. The door profile is defined by the joints where the sticking and panels come together and the styles of each. Fortunately, we offer over 45 combinations of sticking and panel styles, so you can achieve the perfect profile look for your project. If not, we will be happy to help you through the process to create a custom solution.


Each of our panel doors are built with authentic stile-and-rail construction for architecturally correct results. You can choose from diverse panel door styles in configurations from one to nine panels.

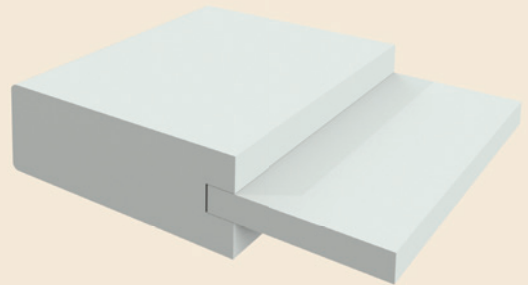


Custom A300  
Square Sticking (SS)  
Flat Panel (F)  
Custom plant on Moldings

# Sticking Options


Sticking is the pattern cut into the interior edges of every stile and rail – and is an essential component in your door's overall style. Stiles and rails are the vertical and horizontal wood pieces that create the frame of a panel door.

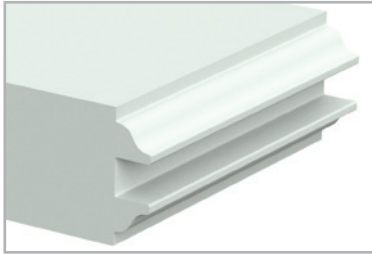


ROMAN OGEE (OG)

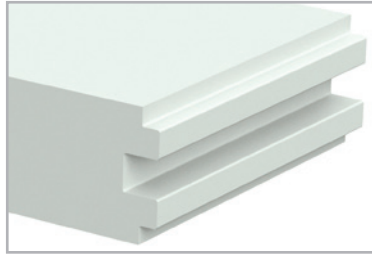


ONE STEP (OS)

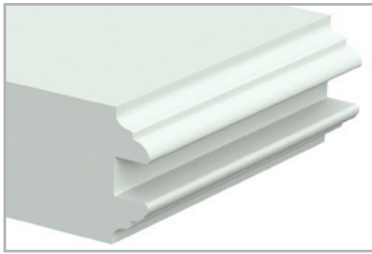


COVE & BEAD (CB)

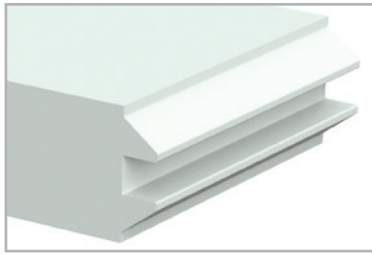


BEVEL (BV)

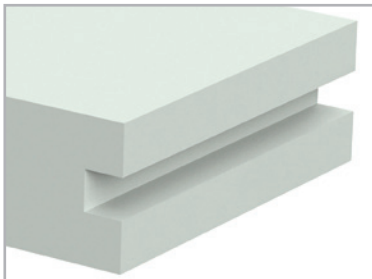

SQUARE STICK (SS)

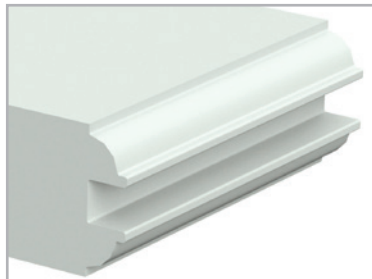

QUARTER BEAD (QB)

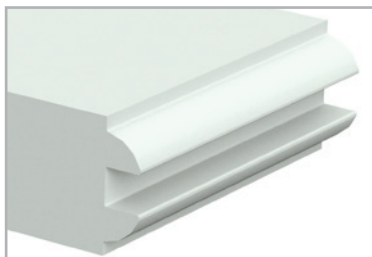


QUARTER ROUND (QR)


# Panel Options

We offer various panel styles that work with the sticking to complete the style of your door's distinctive profile. You can work with our experts to find a profile that is both unique, attractive and matches your planned design aesthetic.


RAISED PANEL (R)

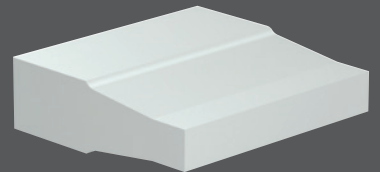


DOUBLE HIP PANEL (D)

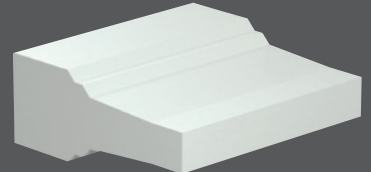


SCOOP PANEL (S)

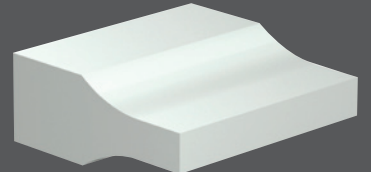


JUNIOR BEVEL PANEL (JR)

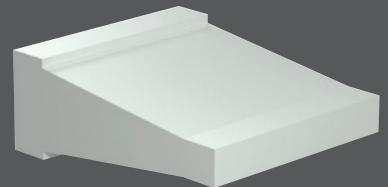

FLAT PANEL (F)

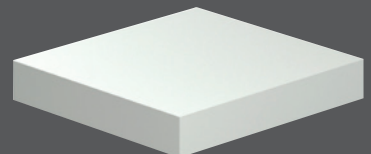


SENIOR RAISED PANEL (SR)

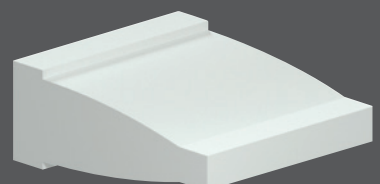


# Raised Moulding


We have a wide selection of decorative applied mouldings that can be applied to your doors. If you don't see what you want, send us a sketch and we can build it.

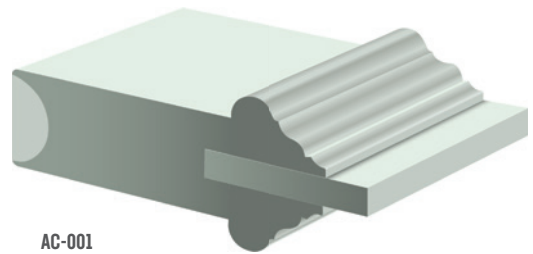


AC-001

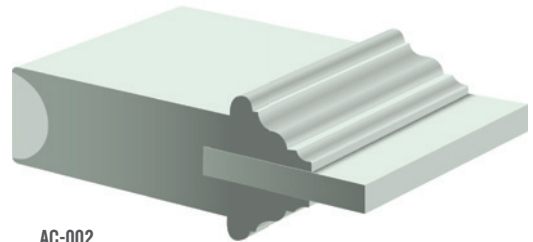


AC-002

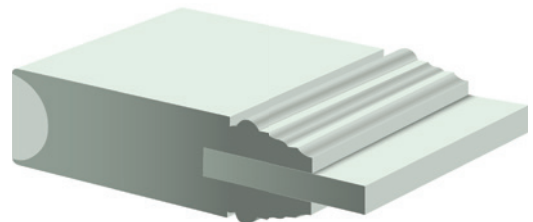


AC-003

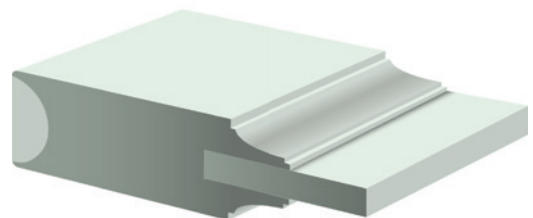

AC-004

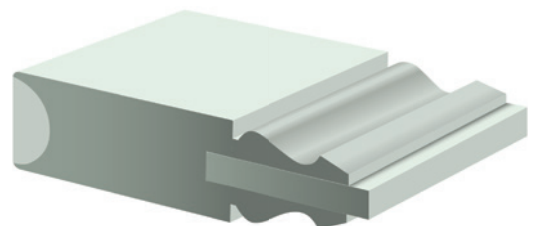

AC-005

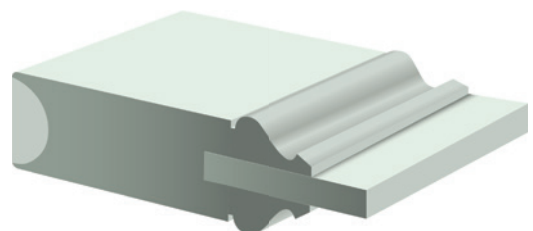






















































































AC-006



# DC

## Panel Doors

### Architectural Concepts / Door Collection


 <b>A100</b> 	 <b>A101</b>  	 <b>A103</b>   	 <b>A105</b>   	 <b>A200</b> 	 <b>A201</b>  	 <b>A202</b> 
 <b>A203</b>   	 <b>A204</b>  	 <b>A205</b>   	 <b>A206</b> 	 <b>A207</b>   	 <b>A208</b>  	 <b>A209</b>   
 <b>A213</b>   	 <b>A216</b> 	 <b>A217</b>  	 <b>A218</b>   	 <b>A219</b>   	 <b>A220</b> 	 <b>A221</b> 
 <b>A222</b>   	 <b>A223</b>   	 <b>A224</b> 	 <b>A225</b> 	 <b>A226</b>   	 <b>A300</b> 	 <b>A301</b> 




# DC

## Panel Doors


### Architectural Concepts / Door Collection




A302




A303




A304



A305




A306




A307



A308




A309




A310




A311




A312




A313




A314




A315




A316




A317




A318




A319




A321




A322




A323




A324




A325




A326




A327



A328



A329



A330







# DC

## Panel Doors


### Architectural Concepts / Door Collection




A331




A332




A333




A334




A335




A336




A337




A338




A400




A401



A402




A403




A404




A405




A406




A407



A410




A411




A412




A413




A414




A415




A417




A419




A420



A421



A422



A423







# DC

## Panel Doors


### Architectural Concepts / Door Collection




A424




A425




A426




A427




A428




A429




A430




A431




A500




A501




A502




A503




A504




A505




A506




A507




A508




A509




A510




A511




A512




A513




A514




A600




A601



A602



A603



A604







# DC

## Panel Doors


### Architectural Concepts / Door Collection




**A605**




**A607**




**A608**



**A609**




**A610**




**A611**




**A612**




**A613**




**A614**




**A700**




**A701**




**A702**




**A800**




**A801**



**A802**



**A900**



**A901**

